


Passage Cremone Bolt—Interior Only

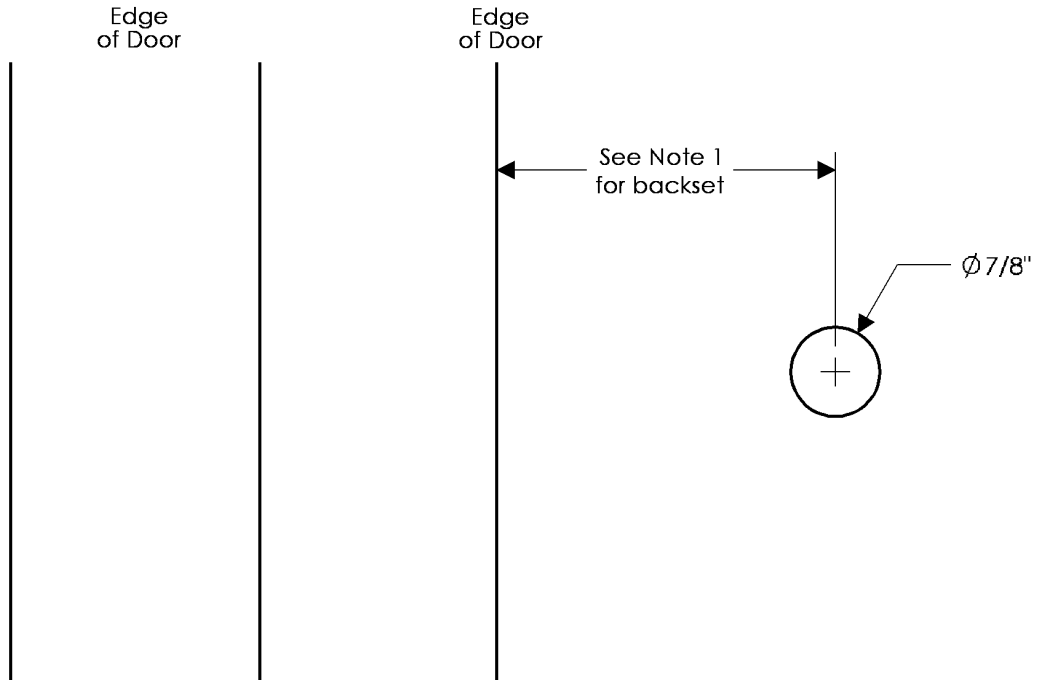

Notes:

1. Backset should be adjusted so escutcheon fits on door stile.
2. No prep needed on edge of door.